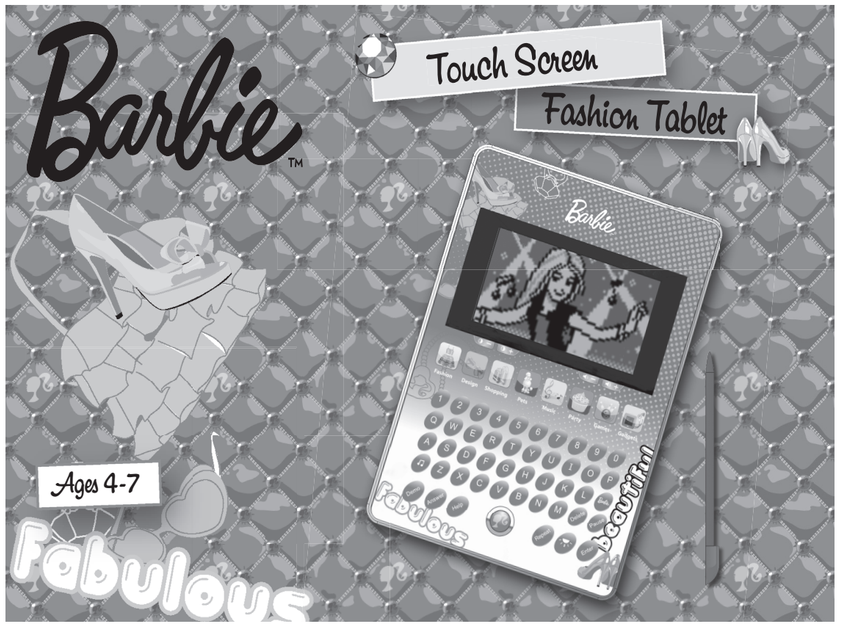

Games 19
Letter Plus 19
Cupcake Surprise 19

Gadgets 20
Sketch Book 20
Calculator 20
Content Update 20
System Setup 20

Chapter 6 21
Troubleshooting

WARNING: All packing materials such as plastic coverings, tapes and tags are not part of this toy, and should be discarded for your child's safety.

Oregon SCIENTIFIC

Dear Parent/Guardian,

Thank you for choosing the ***Touch Screen Fashion Tablet***.
Designed with fun in mind,
the ***Touch Screen Fashion Tablet*** is packed with
stimulating games and activities that will
make an invaluable contribution to your child's development.
The activities used to help further your child's skills include writing skills, art, reflex,
mathematics, memory, logic, music and games.
The ***Touch Screen Fashion Tablet*** provides a dependable and
realistic introduction to a computer tablet, and
encourages creativity and independent learning.
Learning with Barbie™ is so much fun!

barbie.com™

BARBIE and associated trademarks and trade dress are owned by,
and used under license from, Mattel, Inc.© 2011 Mattel, Inc. All Rights Reserved.

Table of Contents

Chapter 1 4
About the *Touch Screen Fashion Tablet*
Chapter 2 7
Getting Started
Chapter 3 10
Game Rules and Selection
Chapter 4 11
Useful Features and Controls
Chapter 5 14
Press And Write 14

Fashion 15
Runway Surprise 15
Fashion Styling 15
Catwalk Fame 15
Getting Ready 15

Design 15
Jewelry Fun 15
Dress Up 16
What's Inside 16
Match Up 16

Shopping 16
Accessory Shopping 16
Spot The Differences 16
Matching Shoes 16
Mall Out 17
At The Counter 17

Pets 17
Pet Park 17
Find The Way Home 17
Where's The Ball 17
Pet Match 17

Music 18
DJ Tap 18
Follow Me 18
Musician Barbie™ 18
DJ Turn 18

Party 18
Jewel Popup 18
Party Time 18
Fashion Write Up 19
Balloon Pop 19

Chapter 1

About the *Touch Screen Fashion Tablet*

Features

30 English Activities
- Fashion
- Design
- Shopping
- Pets
- Music
- Party
- Games
- Gadgets

Multimedia
- Digital sound and animation

Display
- LCD touch screen
- Automatic shut-down

Interface
- Touch screen with writing recognition
- QWERTY keyboard
- Number keys
- Home key
- Fun animation buttons
- Game selection instant access buttons
- Volume control buttons
- Backlight button
- Music on/off button

Audio
- The voice of Barbie™
- USB plug

Unit

The ***Touch Screen Fashion Tablet*** is supplied with the following parts (please contact your retailer should any parts be missing):

1 - Unit
2 - Instruction manual
3 - Stylus pen
4 - USB cable

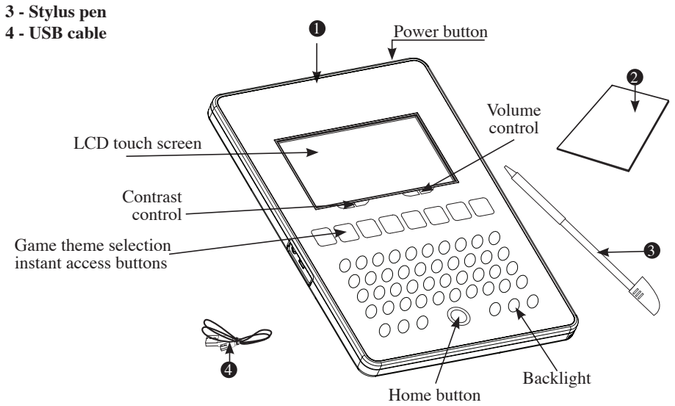

Unit

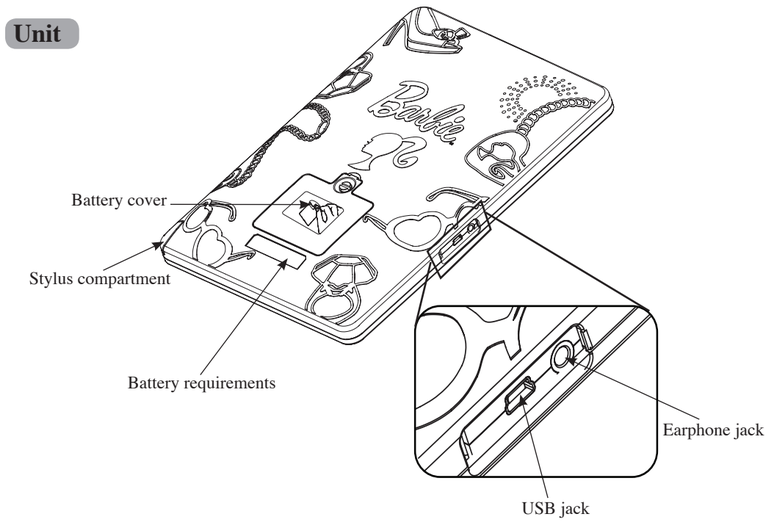

Chapter 2

Getting Started

The ***Touch Screen Fashion Tablet*** operates on 3 "AA" size batteries.

Battery Installation

1. Make sure the unit is turned off.
2. Open the battery cover at the back of the unit using a coin or straight blade screwdriver.
3. Insert 3 "AA" size batteries (note the correct polarity: +, -).
4. Replace the cover.

The underside of the tablet has a thick wall which may present slight difficulty when changing the batteries. It is recommended that adults help children to change the batteries using a suitable tool.

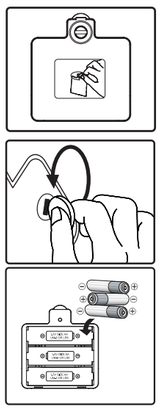

Caution
- Do not mix different types of batteries or old and new batteries together.
- Only use batteries of the same or equivalent type as recommended.
- Remove all batteries when replacing.
- Remove batteries if the unit is not going to be used for long periods of time.
- Do not dispose of batteries in fire.
- Do not recharge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging them.
- Rechargeable batteries should only be charged under adult supervision.
- Remove exhausted batteries from the toy.
- Do not short-circuit the supply terminals.

Starting the *Touch Screen Fashion Tablet*

In order to play and access all 30 games in the ***Touch Screen Fashion Tablet***, please pull and remove the Try-Me tag before turning on the unit. Turn on the ***Touch Screen Fashion Tablet*** by pressing the "⏻" button located on the top right hand corner of the tablet or by pressing on the "Home" button located at the center, in the bottom of the tablet.
At the end of a session, remember to turn off the power by pressing the "⏻" button.

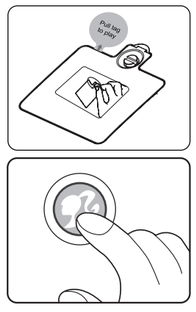

Auto-off

If there is no input on the unit after a few minutes, and the player's name has not been input into the tablet, the unit says "OK! Let's play again soon!" and automatically turns itself off to conserve power. To start playing again, just press the ⏻ button or the "home" button to turn the unit back on.

Storage & Care

To ensure that the product enjoys a long life, please follow these simple rules:
- Regularly examine the unit for damage to the cord, plug, enclosure and other parts. In the event of such damage, the unit must not be used until the damage has been repaired.
- Always disconnect the power supply before cleaning.
- Keep the unit clean by wiping the exterior of the unit with a dry cloth.
- Avoid getting the unit wet.
- The unit should not be dismantled.
- Always store the unit away from direct sunlight and high temperatures.
- Avoid leaving the unit in a car where it is exposed to direct sunlight.
- The unit should not be subjected to extreme force or shock.

Home button



Power button

Chapter 3

Game Rules and Selection

Game Theme Selection
There are 8 themes in the ***Touch Screen Fashion Tablet***: Fashion, Design, Shopping, Pets, Music, Party, Games and Gadgets.
The main theme selection menu will automatically scroll to the next theme every 5 seconds. The player can also touch the left and right arrow keys displayed on the screen to scroll to the next theme and touch on the image or press "Enter" to select. All the games under a theme are listed in the game title selection menu. The player can touch the up and down arrow keys on the screen to scroll through the activity names and touch the title or press "Enter" to play. Alternatively, the player can press one of the instant theme access buttons to go straight to a particular game theme. Every 15 seconds, if the unit is idle, Barbie™ will say "Pick a theme to play! Touch the picture to start!".

Attempts
In most activities the player will have three attempts per question. Barbie™ will reveal the correct answer after three incorrect attempts.
If there is no input after 15 seconds, Barbie™ will repeat the instruction prompt.

Scoring
At the end of each game round (consisting of ten questions in most games), after the successful completion of all levels in an activity, or if the time is up, a summary score screen will be shown so the player can see how well they have done. A "Play Again?" screen will appear and the player can choose if they want to play again or exit and choose another activity.

Time Limit
For most games, the player has from 30 to 120 seconds to answer depending on the question and game.

Chapter 4

Useful Features and Controls

Touch Screen
Touch the screen to draw, write, select and scroll through the game plays.

Keyboard
The ***Touch Screen Fashion Tablet*** features a fully functional computer keyboard.

Instant Theme Access Buttons
Pressing an instant access button will bring the player to a list of activities in that category.

Home
Press the "Home" button to turn on the product. If the product is on, press the "Home" button to exit the screen currently on display and return to the previous menu.

Volume
Press the volume controls to adjust the volume.

Contrast
Press the contrast controls to adjust the contrast.

Demo
Press the Demo button to see a demonstration of some of the exciting features and activities in the ***Touch Screen Fashion Tablet***.

Answer
Press the Answer button to reveal the correct answer to a question. The player needs to think carefully before pressing this button as no points will be awarded for that question.

Help
Press the Help button for extra hints to a question. Using this function will reduce the total score for the current question. Not all games have this function.

Repeat
Press the Repeat button to repeat a question or an instruction.

Backlight Button
Press the button to change the backlight from seven different colors or to turn it on and off.

Enter
Press the Enter button to submit an answer.

Delete
Press the Delete button to delete the previously entered letter, number or drawings.

Pause
Press the Pause button to pause game play. Press this button again to resume game play.

Barbie™
Press the Barbie button to play short fun animations with music.

Music On/Off button
Press the button to turn the game play background music on and off.

Connecting your computer to download your name and game packages

On *Touch Screen Fashion Tablet*:

1. Turn your tablet on.
2. Go to *Content Update* under the game theme: Gadgets.
3. Note the size of the plug and insert the USB cable into both the tablet and the computer.
4. Touch *YES* on the ***Touch Screen Fashion Tablet***, when the screen displays "USB Download?".

On computer:

First time installation:

1. Visit *http://fashiontablet.oregonscientific.com* to download and install the program. Follow the instructions provided and install the program.

Content download:

1. Once the program is installed, open the program to begin customizing the ***Touch Screen Fashion Tablet***.
2. Follow the instructions to input the player's name.
3. Once a name is inserted, you can then select additional game content and change the game play.
4. The program will then download the selected content and apply it to the ***Touch Screen Fashion Tablet*** through a USB cable.

Chapter 5

Activities

(00)

00 Press and Write
Press a letter or number on the keyboard during the game theme or game play selection. You can then learn to write the letter or number and learn a word or count.

Fashion

01 Runway Surprise
Barbie™ is getting ready for the runway, let's help her get ready! Touch the screen to connect the dots to reveal and learn a shape or a fashionable item!

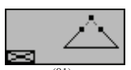
(01)

02 Fashion Styling
Barbie™ is running her checklist. Help her work out how many items she needs to bring by touching or writing on the screen. Where the answer is more than one digit, the player can touch the line representing the digits to choose where to enter first.

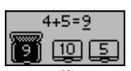

(02)

03 Catwalk Fame
Barbie™ is going to do the catwalk! Write the letters or numbers inside the stars to get Barbie™ across the stage before the next model shows up.

(03)

04 Getting Ready
Barbie™ has arrived at her next catwalk event and has found the place is a mess! Pick an area and help Barbie™ arrange by touching the items on the screen.

(04)

Design

05 Jewelry Fun
Design a unique pendant to be put in a necklace. Draw and touch the gems on the side to spice it up!

(05)

06 Dress Up
Let's shop around and find clothes for Barbie™ to try on and buy, then figure out their total cost. Where the answer is more than one digit, the player can touch the line representing the digits to choose where to enter first.

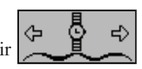
(06)

07 What's Inside
Remember what is inside the drawer and touch the screen to answer.

(07)

08 Match Up
Remember what is inside Barbie™'s purse! Touch the screen to answer.

(08)

Shopping

09 Accessory Shopping
Let's shop with Barbie™! Prepare and buy one, two or three appropriate items for the weather.

(09)

10 Spot The Differences
Touch the screen and spot the differences between the two objects.

(10)

11 Matching Shoes
A shoe sale is happening but they are everywhere! Find the shoe that matches the top.

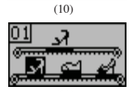

(11)

12 Mall Out
Get Barbie™ to the mall for a shopping extravaganza! Touch and hold to move any obstacles to clear a path for her!

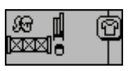
(12)

13 At The Counter
Calculate and write out how much each set costs! Where the answer is more than one digit, the player can touch the line representing the digits to choose where to enter first.

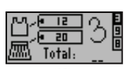

(13)

Pets

(14)

14 Pet Park
Touch and bring a pet for a walk in the park.
Once at the park, touch the screen to jump over the obstacles.

(15)

15 Find The Way Home
Sequin™ is lost! Draw a path on the screen from Sequin™ to her house to guide her home!

(16)

16 Where's The Ball
Barbie™'s playing catch with her puppies but they've hidden the ball! Watch carefully and remember which puppy has the ball! Touch the screen to answer.

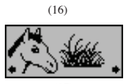
(17)

17 Pet Match
Touch the screen to complete the picture and learn what the animals or insects eat!

Music

18 DJ Tap
Touch the screen to select a song and the music notes to play it.

(18)

19 Follow Me
Touch the screen to pick a song and the correct piano keys to play a melody.

(19)

20 Musician Barbie™
Touch the screen to pick an instrument and compose a melody.

(20)

21 DJ Turn
Touch the notes when they reach the circles at the bottom of the screen.

(21)

Party

22 Jewel Popup
Touch to pick up as many jewels as possible within 30 and 60 seconds.

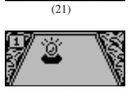
(22)

23 Party Time
Barbie™ has invited her friends to her party but they will arrive at different times. Help Barbie™ to figure out when they will arrive.

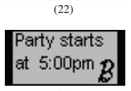

(23)

24 Fashion Write Up
Touch to write and spell out a fashionable item or object.

(24)

25 Balloon Pop
Touch the screen to pop as many balloons as possible within a given time to win a prize!

(25)

Games

26 Letter Plus
Select as many correctly spelled words as you can within a given time!

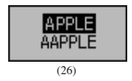

(26)

27 Cupcake Surprise
Remember and find the matching cupcakes on the screen.

(27)

Gadgets

28 Sketch Book
Draw a picture on the screen.

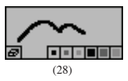
(28)

29 Calculator
Touch the screen to calculate a math equation.

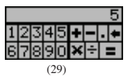

(29)

30 Content Update
Connect to a computer via a USB cable to personalize the tablet and to update new contents for game play. Touch "YES" to start downloading. Go to *http://fashiontablet.oregonscientific.com* for downloading and instructions for installing the program.

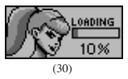

(30)

31 System Setup
Touch the "+" shown on the screen to calibrate the touch screen.
The setup is complete when the screen displays "Setting Completed".

(31)

Chapter 6

Troubleshooting

Developing learning products is a responsibility that we at Oregon Scientific take very seriously. We make every effort to ensure the accuracy and appropriateness of the information which forms the value of our products. However, errors can sometimes occur. It is important for you to know that we stand behind our products and we encourage you to contact our Technical Support Team with any problems and/or suggestions that you might have.
Our Technical Support Team will be happy to help you.
Before contacting an authorized service representative at 1-800-853-8883, carry out the following simple checks. It may save you the time of an unnecessary service call.

No display
Are the batteries installed properly?
Do the batteries need replacing?

Black-out screen / Abnormal display/ Touch screen malfunctions
Disconnect the power supply by removing batteries for at least 10 seconds before connecting the power supply again.

In an environment prone to static discharge, the unit may malfunction.
To reset, remove the batteries for at least 10 seconds before connecting the power supply again.

Conforms to safety requirements of ASTM F963, EN71 Parts 1, 2 & 3 and EN62115.

In an effort to continually improve our products, the actual screen display on the product may differ slightly from the diagrams shown.
Please retain this manual for future reference.

Oregon Scientific, Inc.
19861 SW 95th Avenue
Tualatin, OR 97062, USA
Hotline: 1-800-853-8883
Service: http://us.oregonscientific.com/service
Website: http://us.oregonscientific.com

Warning:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- There may be small parts that can cause abuse and or damage to the unit.
- Not suitable for children under 3 years.

Note:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio

or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

DISPOSAL
Do not dispose of this product as unsorted municipal waste.
Collection of such waste separately for special treatment is necessary.

BI68 US 300102837-00002-10